


# Introduction

## Features and Buttons

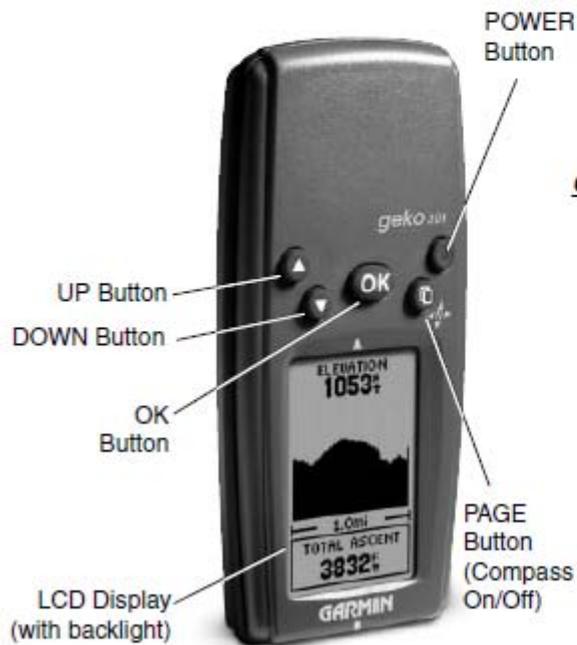

### Geko 301 Features:

- 500 alphanumeric waypoints with name selectable icons
- 20 reversible routes with up to 125 waypoints each
- 10,000 Track points
- 10 Saved Tracks with up to 500 points each
- PanTrack feature that allows you to view the bread crumbs (track points) dropped during your hike or drive
- TracBack route feature which allows you to quickly retrace your track log to a starting position
- 5 interactive games based on your real-time position and controlled by your geographical movement
- WAAS enabled for accuracy less than 3 meters, 95% typical
- Trip Computer page with 34 selectable fields

### Geko 301 Buttons:

The **POWER** Button:

- Press and hold to turn the unit on and off
- Press and release (with the unit on) to turn the backlight on and off

The **PAGE** Button:

- Press to switch between the Main Pages
- Press and hold to turn Compass on or off

The **OK** Button:

- Press to confirm data entry or menu selection
- Press and hold to Mark your current position and access the Mark Waypoint Page

The **UP/DOWN** Buttons:

- Press to highlight options on pages and menus
- Press to adjust display contrast on the Satellite Page
- Press to Zoom out (**UP**) and Zoom in (**DOWN**) on the Map Page
- Press to cycle through the data fields on the Navigation Page